# INSTALLATION & OPERATING INSTRUCTIONS

## BAYCO AIR INTERLOCK ELECTRICAL SWITCH

#### **Model Numbers**

5000S	Air Interlock Electrical Switch Kit
5000AISW	Air Interlock W/ Electrical Switch Attached

#### For Sales & Service Contact

### **Dixon Bayco**

A DIXON COMPANY

#### USA:

Dixon Bayco USA Chestertown, Maryland Phone: 410-778-2000 Fax: 410-778-4702

Toll Free: 800-355-1991

#### **CANADA:**


Dixon Bayco Limited


Barrie, Ontario

Phone: 705-436-1125 Fax: 705-436-6251

Toll Free: 866-436-1125



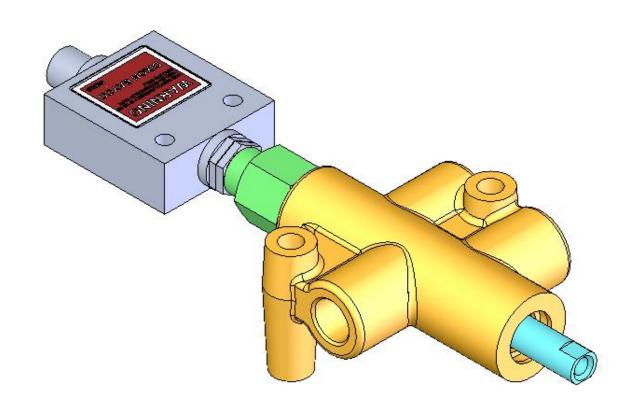

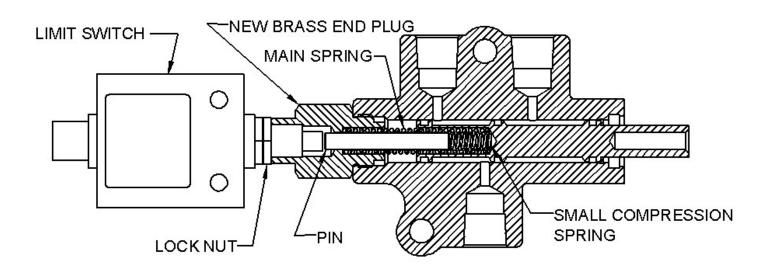

#### Tools required for installation and part replacement

14mm open end wrench 3/4" open end wrench

#### INSTALLATION


CAUTION! SAFETY GLASSES MUST BE WORN DURING INSTALLATION

AND SERVICE.

CAUTION! BRASS END PLUG IS RESTRAINING A COMPRESSION

SPRING. ENSURE THAT YOU HAVE A FIRM GRIP ON THE

**BRASS END PLUG BEFORE REMOVING** 

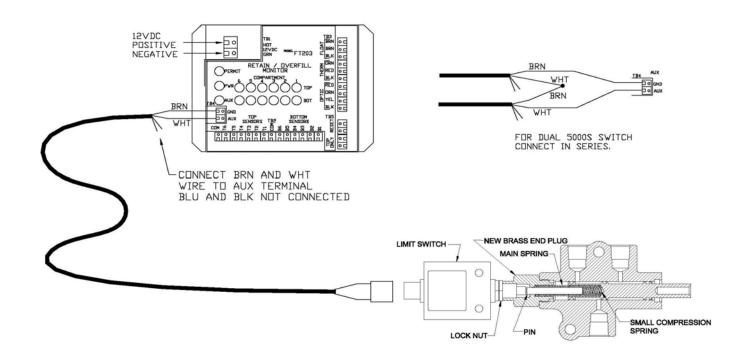

#### **ASSEMBLY**

- 1. Using the 3/4" open-end wrench, remove the brass end plug from the existing Dixon Bayco Air interlock valve. Hold the end plug firmly to prevent the spring from ejecting the plug from your hand.
- 2. Leave the main spring installed inside the plunger. You may discard the brass end plug.
- 3. Install the new brass end plug from the kit. This is accomplished by compressing the main spring while tightening the new end plug in place.
- 4. From the kit bag, place the small compression spring through the hole in the new brass end plug until it slides down the inside of the main spring.
- 5. From the kit bag, place the pin through the hole in the new brass end plug until it slides down the inside of the main spring.
- 6. Retrieve the limit switch from the kit bag. Insure that the two lock nuts are installed and are threaded against the body.
- 7. Install the limit switch into the new brass end plug as far as it will go. Do not over tighten.
- 8. You can back the limit switch off a maximum of 1/2 turn to orient the switch the way you like it.
- 9. Secure the switch by tightening one of the jam nuts (using the 14mm wrench) against the brass end plug.
- 10. Connect the wire cable to the limit switch by aligning the notch in the wire plug to the projection in the limit switch. Tighten the collar of the wire cable to secure it to the limit switch
- 11. Connect the brown and white wires of the cable to the AUX port of the on board monitor.
- 12. Cut off the blue and black wires

#### **DIXON BAYCO WARRANTY**

For Warranty Information, please refer to the inside back cover of the latest Dixon Catalogue.